


Stair anatomy

Knowing just where to use a particular stair part can be confusing. Refer to the diagram below for helpful information. The sizes shown are based on a 34" rake rail height and a 36+" level rail height.

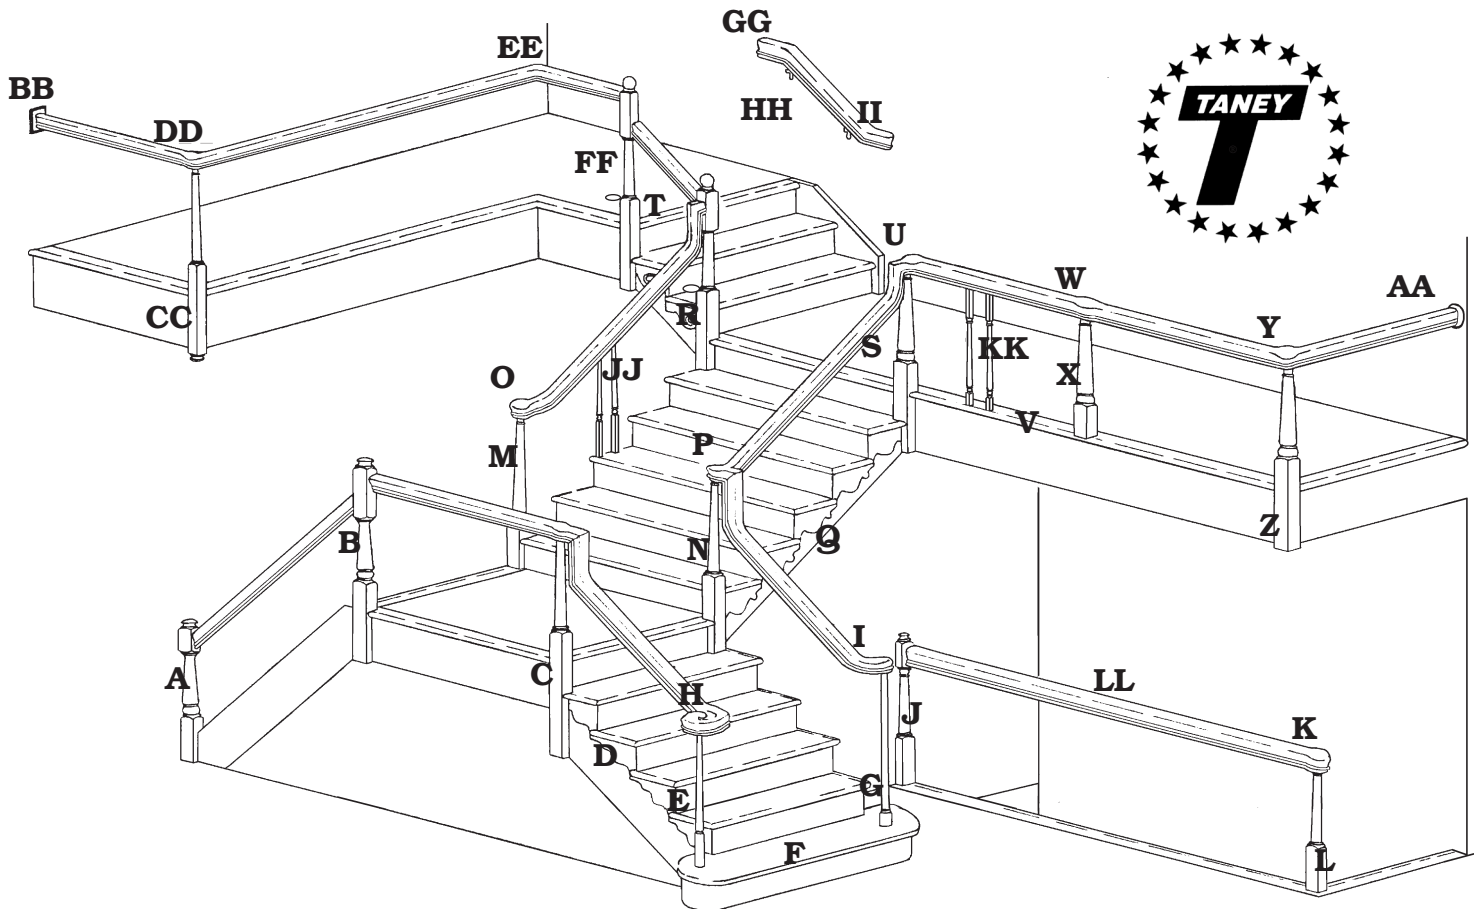

- | | | | |
|----------|---|-----------|--|
| A | T-1640 (47½") - Starting newel with no fitting | T | T-2599 - Gooseneck |
| B | T-1615-13-60 (59½") - Landing newel with no fitting | U | T-2586 - Righthand gooseneck with cap |
| C | T-1600-60 - Landing newel with gooseneck fitting | V | T-3080 - Landing tread |
| D | T-101 - Bracket | W | T-2520 - Tandem cap |
| E | T-1605-50 (50") - Volute newel | X | T-1600 (41½") - Second floor newel |
| F | T-4015 - Bullnose starting step | Y | T-2521 - Quarterturn cap |
| G | T-1605-50 - Turnout newel | Z | T-1600-60 - Landing newel |
| H | T-2530 - Lefthand volute | AA | T-202 - Rosette |
| I | T-2545 - Righthand turnout | BB | T-203 - Rosette |
| J | T-1642 (47½") - Landing half-newel | CC | T-1600-60 - Landing newel |
| K | T-2509 - Opening cap | DD | T-2521 - Quarterturn cap |
| L | T-1600-48 - Starting newel | EE | T-2511 - Level quarterturn |
| M | T-1600-48 - Starting newel | FF | T-1643BT (59½") - Landing newel |
| N | T-1600-60 - Landing newel | GG | T-2516 - Overeasing returned end |
| O | T-2510 - Starting easing with cap | HH | T-110 - Wall rail bracket |
| P | T-2565 - Righthand gooseneck with upeasing and cap | II | T-2515 - Starting easing returned end |
| Q | T-104 - Bracket | JJ | T-1515 (34") - Pin-top balusters
T-1515 (39") - Pin-top balusters |
| R | T-1641BT (59½") - Second floor newel | KK | T-1560 (39") - Square-top balusters |
| S | T-1600-60 - Second floor newel | LL | T-2500 - Handrail |

Quality wood stair products since 1958.



The Taney Corporation
Manufacturers of Quality
Wood Stairs and Stair Parts
Taneytown, Maryland 21787-2104
(410)756-6671 FAX (410)756-4103